


LIGHTING DECISION GUIDE

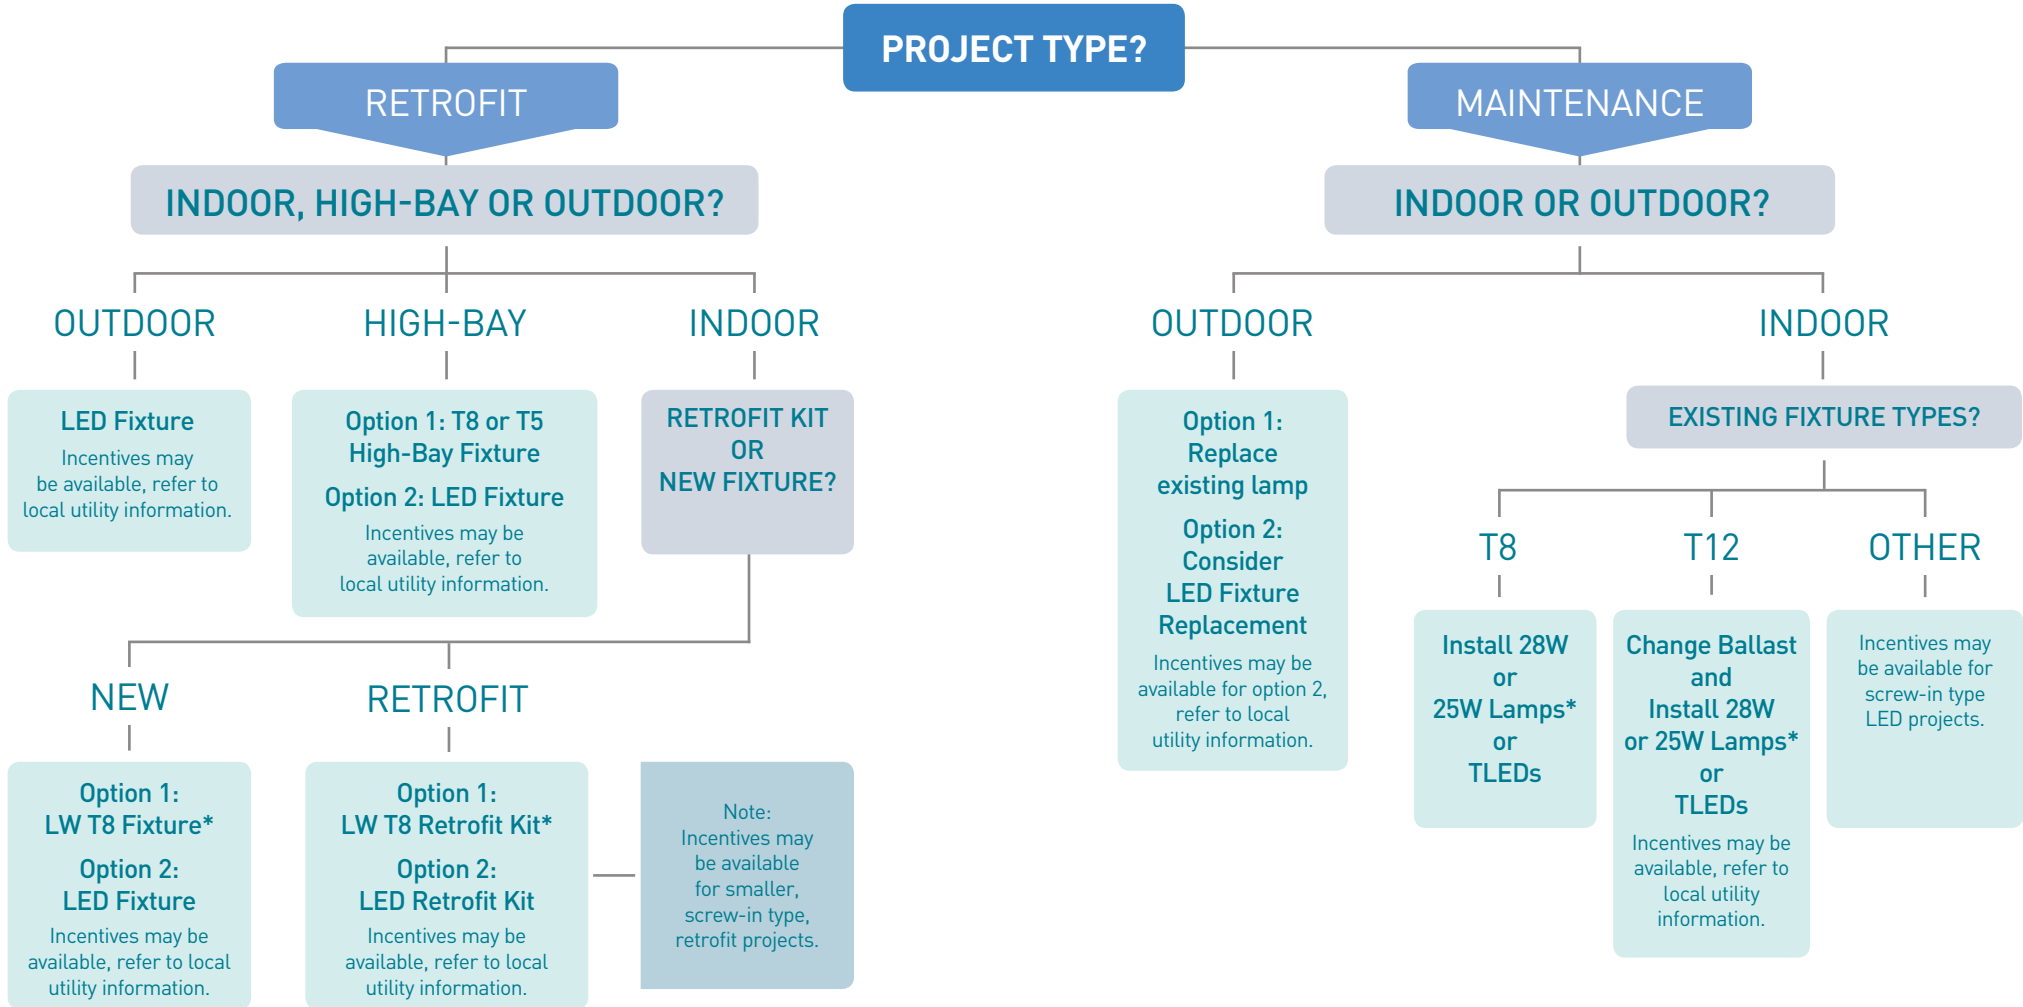

*Ambient space temperatures should be around 70°F to gain full performance of low wattage fluorescent lamps.

Building owners around the region are enjoying significant savings by incorporating low-wattage T8 lamps into their lighting maintenance solutions. By switching from 32-watt T8 to 28- or 25-watt T8 lamps, you can:

- Improve your bottom line and cut costs by up to 23%
- Reduce maintenance with 50% fewer trips up the ladder
- Enjoy longer lamp lifetimes, up to 84,000 hours
- Install easily thanks to compatibility with existing ballasts